




Swing Clamps

with 90° swing angle, clamping force from 60 to 164 kN double acting, max. operating pressure 400 bar



Advantages

- Ideal force transmission
- Compact design
- Olamping force from 60 up to 164 kN
- High operating safety by position monitoring, manual emergency operation and overload protection
- Suitable for large clamping edge tolerances (±1.5 mm)
- No colliding edges when inserting the dies
- Optimum utilisation of the ram area
- Clamping at difficultly accessible points

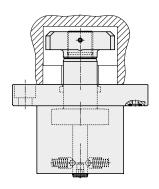

Application

Swing clamps are installed in press rams or press beds, in machine tools and plants. Thanks to the compact design, they are particularly suitable where space is limited. Use at ambient temperatures up to max. 70 °C


Description

Swing clamp, double acting, with 90° swing angle. Monitoring of the clamping and unclamping position by inductive proximity switches. The swing mechanism is protected by a spring-loaded overload protection and equipped with manual emergency operation. Tie rod, piston and swing mechanism are hardened. The hydraulic system is protected by a wiper ring.

Connecting possibilities


Two alternatives are offered for connecting the swing clamps.

Pipe connection

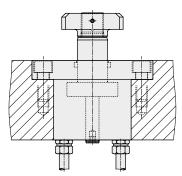

Pipes are recommended in applications where fittings are easily accessible and where pipes do not impede installation and dismantling of the swing clamps.

Manifold-mounting connection

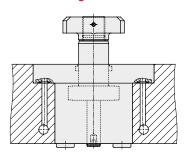

Hydraulic oil is fed through the drilled holes in the bed and in the ram. There are no exposed pipes or fittings. The sealing is made by O-rings supplied with the clamp.

Easy installation, ease of servicing.

Application example



Use of swing clamps in the press ram. Shown is the die change position, i.e. the ram is in the upper position and the swing clamps are extended.

Accessories

Flange as a clamping point

for installation in press dies see page 3


Electrical accessories see page 5


Hydraulic power units see product group 7

Hydraulic accessories see product group 11

Hilma-Römheld GmbH · Schützenstraße 74 · 57271 Hilchenbach, Germany · Tel.: +49(0)2733 / 281-0 · Fax: +49(0)2733 / 281-169

Technical data Dimensions

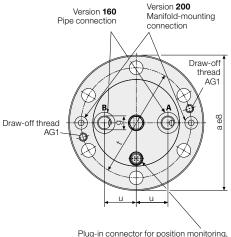

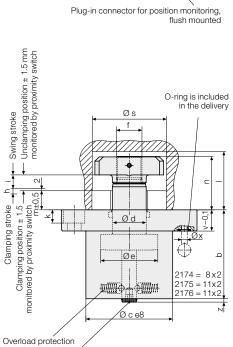


Technical data

Max. operating pressure 400 bar

Clamping force at 400 bar	[kN]	60	104	164
Clamping force at 100 bar	[kN]	15	26	41
Piston Ø e	[mm]	54	70	88
Rod Ø d	[mm]	32	40	50
Swing stroke i	[mm]	13	18	24
Clamping and sink stroke h	[mm]	5	6	6
Oil volume clamping	[cm ³]	22	52	107
Oil volume unclamping	[cm ³]	34	77	158
Max. flow rate	[cm ³ /s]	10	16	25
а	[mm]	128	160	192
b	[mm]	84	104	122
С	[mm]	82	104	126
f	[mm]	M 24 x 1.5	M 30 x 1.5	M 36 x 1.5
g		G 1/4	G 3/8	G 3/8
k	[mm]	13	17	21
1	[mm]	55	70	87
m	[mm]	18	23	28
n	[mm]	51	68	85
0	[mm]	20	26	33
р	[mm]	13	18	22
q	[mm]	34	42	52
r	[mm]	65	80	95
S	[mm]	70	86	103
t	[mm]	104	130	156
u	[mm]	30	38	45
V	[mm]	20	28	35
W	[mm]	38	47	59
X	[mm]	5.5	8	8
У	[mm]	70	86	103
Z	[mm]	4	5	6
(Manual emergency operation) SW2	[mm]	6	8	10
Draw-off thread AG1		M8	M 10	M12
Weight	[kg]	4.2	8.6	15
with pipe connection	Part no.	2174 160	2175 160	2176 160
with manifold-mounting connection	Part no.	2174200	2175200	2176200

Further sizes and special versions are available on request

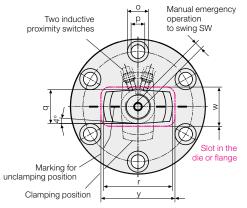



Manual emergency operation to swing SW

Important note!

Access to one of the two manual emergency operations is essential.

Mounting hole for manifold-mounting or pipe connection

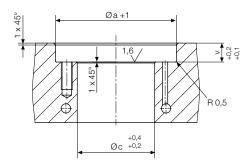


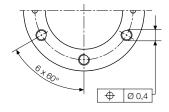


Manifold-mounting connection requires a plain and neat surface.

Accessory


Flange as a clamping point for installation in press dies

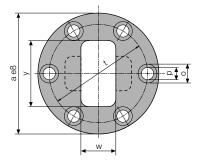


Flange - low

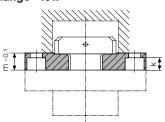



Flange - high

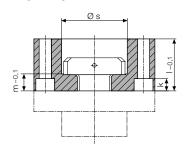

Mounting hole

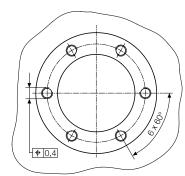

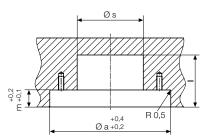

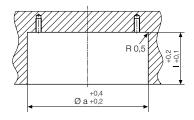

Clamp t	ype		2175160 2175200	
а	[mm]	128	160	192
k	[mm]	13	17	21
I	[mm]	55	70	87
m	[mm]	18	23	28
0	[mm]	20	26	33
р	[mm]	13	18	22
S	[mm]	70	86	103
t	[mm]	104	130	156
W	[mm]	38	47	59
V	[mm]	70	86	103


Flange - low
Part no. 5700016 5700017 5700018
Flange - high
Part no. 5700019 5700020 5700021

Functional description Functional diagram

Functional description

Double acting swing clamp, with 90° swing angle. Monitoring of the clamping and unclamping position by inductive proximity switches. The swing mechanism is protected by a spring-loaded overload protection and equipped with manual emergency operation. Tie rod, piston and swing mechanism are hardened. The hydraulic system is protected by a wiper ring.

Hydraulic circuit diagram

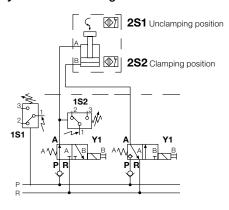

Clamping



 Push and position the die into the press with the swing clamps in the off-position.



 Lower the press ram onto the upper part of the die.
 The tie rods of the swing clamps will pass through the clamping slots of the upper die.



 The swing clamps are operated by means of a power unit.
 The tie rod rotates by 90° and is then in a transverse position to the clamping point.

The upper die is hydraulically clamped. Once the clamping pressure has been reached the power unit will be switched off by the pressure switch 1S2.

In the case of a pressure drop, the power unit is switched on by the pressure switch and builds up to the required clamping pressure.

Unclamping




 Move the dies together and return the swing clamps into the unclamping position by means of energising valves Y1 and Y2.

The tie rod rotates by 90° and can then pass through the clamping slot of the upper die.

2. Move the press ram upwards and take the die out.

The clamping and unclamping positions are monitored by inductive proximity switches.

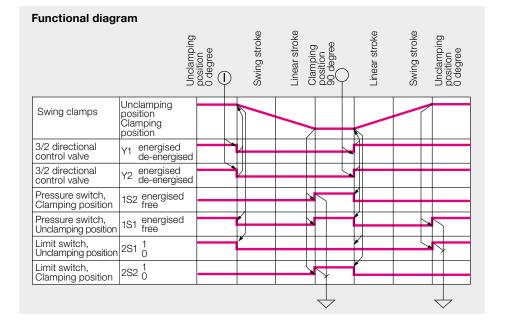

Hydraulic installation

Read the operating manual before starting up. Adjust the flow rate of the power unit so that clamping and unclamping cycles between 10 and 30 seconds are obtained. In order to prevent the swing mechanism from premature wear, the dynamic pressure at port B should not exceed 50 bar while the tie rods retract through the slot.

Swing clamps which are grouped together

should be connected to distribution boards, in order to avoid series connection. Use pipes with larger diameter for connection to the power unit.


If in doubt, please send the installation plan to be reviewed.

Provide a pressure gauge connection in every hydraulic circuit for adjustment and to check operating data.

Other parameters and recommendations for hydraulic installation of die clamping systems are given in chapter no. 1 "General information".

Electrical installation

Connection of the monitoring system for clamping and unclamping position

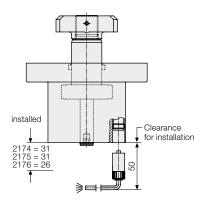


Both proximity switches are connected to the base of the swing clamp through a connecting cable with screw coupling [IP 67].

Please order the connecting cable separately. Further installation may be carried out using a distribution board with an LED display.

Accessories

5-pole connecting cable with screw coupling

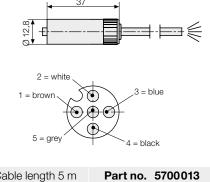

Cable length 5 m Part no. 5700013
Cable length 10 m Part no. 5700014

Accessories

Distribution board with LED display


for the connection of 4 clamps

Display of the unclamping, change-over and clamping position of each clamping element via LED display.

Delivery

- 1 distribution board
- 4 5-pole coupling plug
- 1 16-pole coupling plug

Part no. 5700015

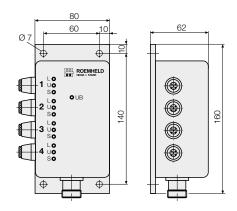

Pin assignment for three-wire proximity switches

Supply voltage

Cappiy Voltage	10 00 1 00
Constant current	≤ 100 mA
Type	inductive, break contact pnp
Unclamping br	O I (brown) L+
2S1 pnp bl	2 (white) unclamping position
	● 3 (blue) L-
Clamping b	_
Limit switch 2S2 pnp	

10 - 30 V DC

clamping position

Pin assignment of out	put plug:
Pin 1 = L+ Pin 2 = L- Pin 3 = 1L Pin 4 = do not use Pin 5 = 1S Pin 6 = 2L Pin 7 = do not use Pin 8 = 2S Pin 9 = 3L Pin 10 = do not use Pin 11 = 3S Pin 12 = 4L Pin 13 = do not use Pin 14 = 4S Pin 15 = free Pin 16 = free	L = unclamping position U = not assigned S = clamping position